


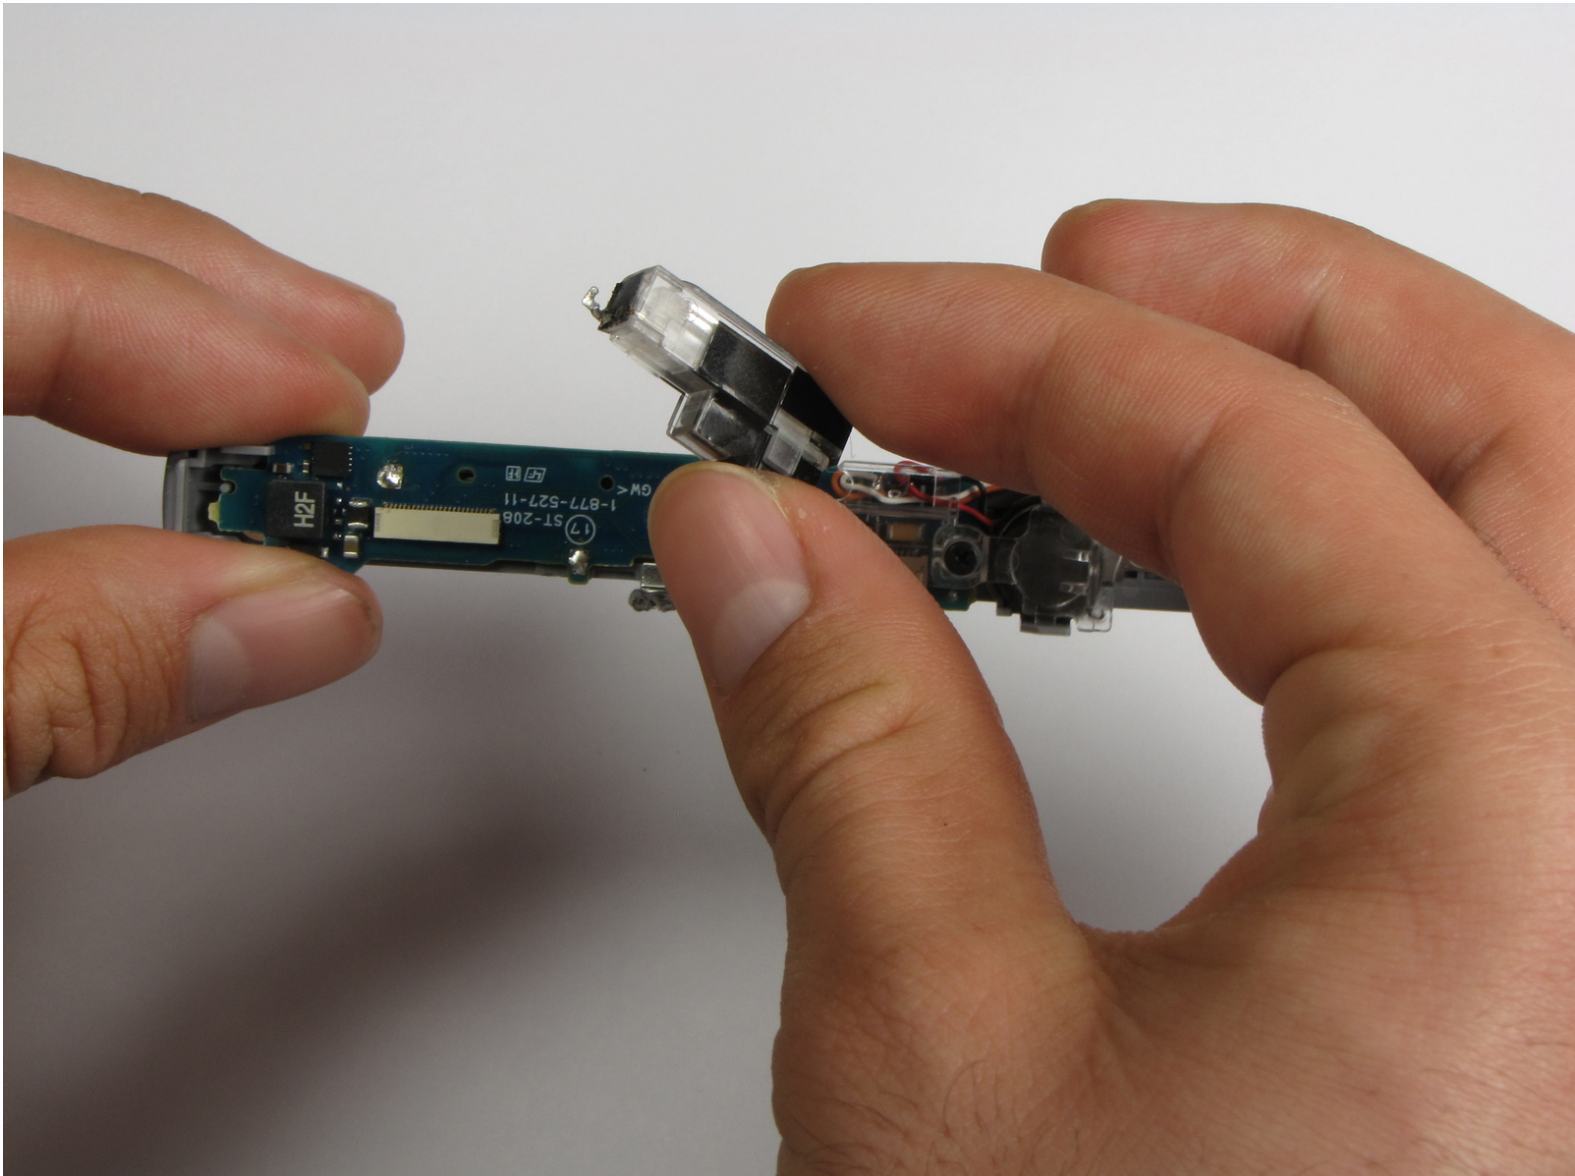

Sony Cyber-shot DSC-W290 Flash Bulb Replacement

This guide will show you how to install or replace the Sony Cyber-shot DSC-W290's flash bulb.

Written By: William Schill



INTRODUCTION


Make sure you have all of the requisite tools on hand before beginning to replace the flash bulb.



TOOLS:


- [Soldering Workstation](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Desoldering Braid](#) (1)
-

Step 1 — Battery

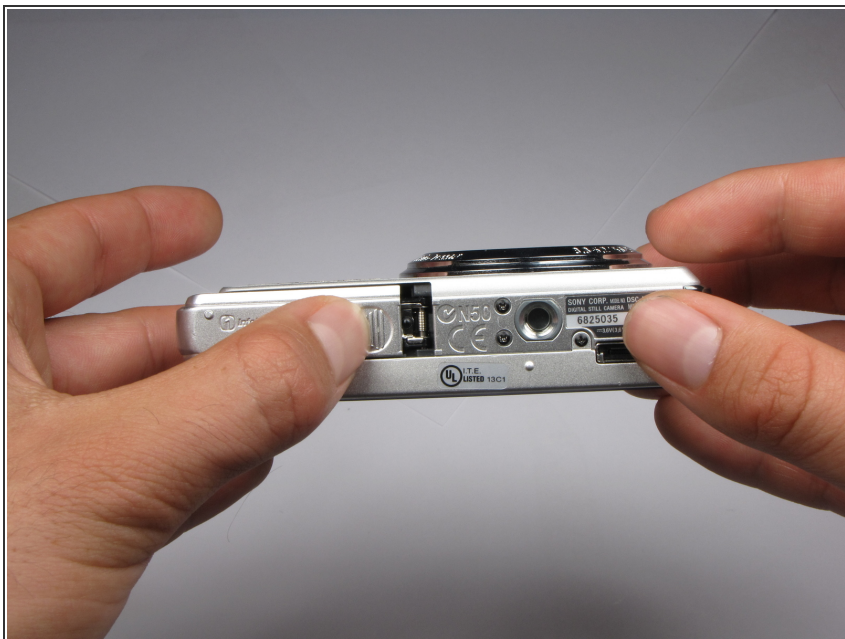

- Find the hatch labeled "open" on the left side of the bottom of the camera.
- Slide the hatch in the direction that the arrow is pointing. The hatch will open outward on its own.

Step 2

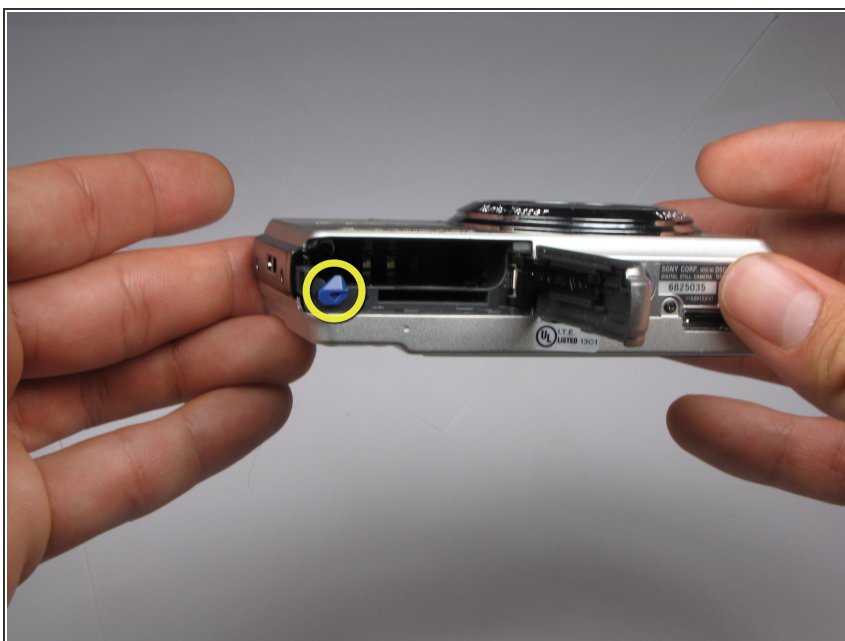

- Slide the blue locking tab to release the battery. Slide the battery out of the camera.

Step 3 — Outer Casing



- Replace hatch and rotate camera 180 degrees. You should still be looking at the bottom of the camera.
- Remove the four 2.5mm Philips #0 screws.

Step 4



- Turn the camera so the left side-panel faces you. (It says 5x Optical Zoom)
- Remove the two 2.5mm Philips #0 screws.
- ⓘ You may have to remove the screws with a pair of tweezers when the screws are almost out.

Step 5




- Turn the camera so the right side faces you.
- Remove the two 2.5mm Philips #0 screws.
- ⓘ You may have to remove the screws with a pair of tweezers when the screws are almost out.

Step 6



- Rotate camera so that the back is facing you.
- Pull the back casing directly away from the LCD screen.

Step 7

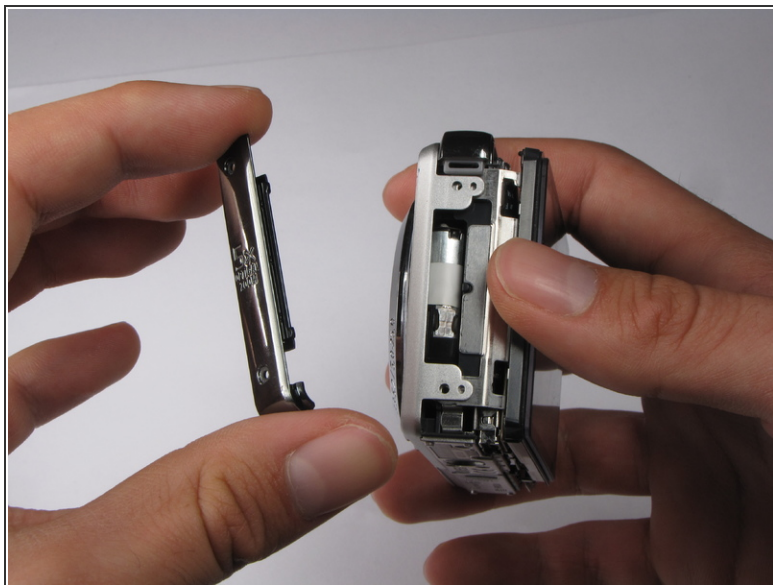


- Turn the camera so that the left side is facing you.
- Pull the left side-panel off of the camera.

Step 8





- Turn camera so that the front of the camera is facing you.
 - Pull the front casing directly away from the camera.
- i** The right side panel may fall off when you take the front panel off.

Step 9

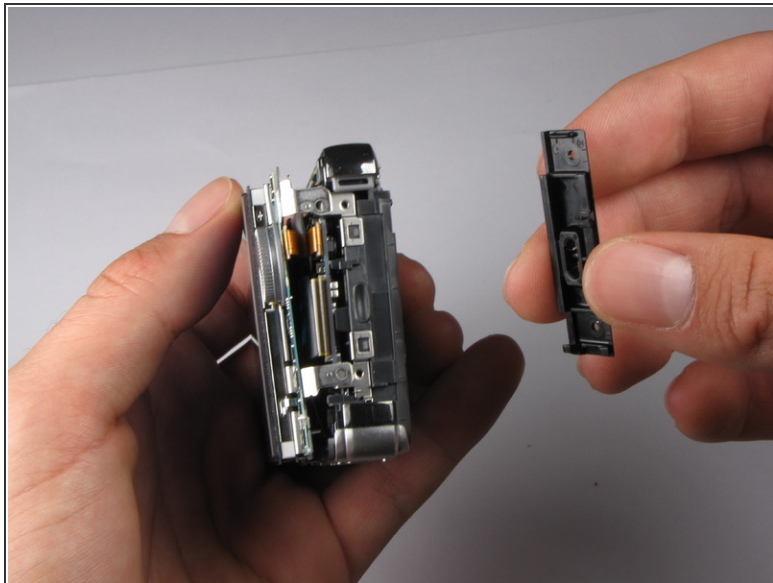


- Turn the camera so that the right side is facing you.
- Pull the right side-panel away from the rest of the camera.

Step 10

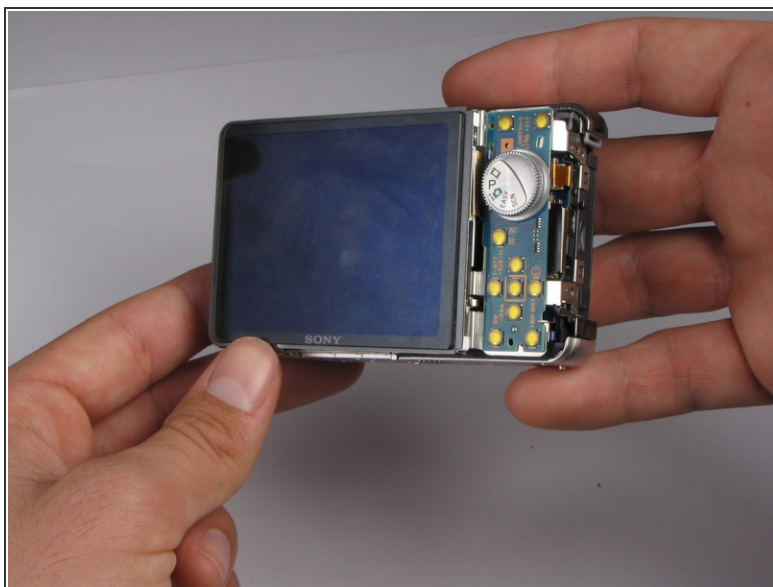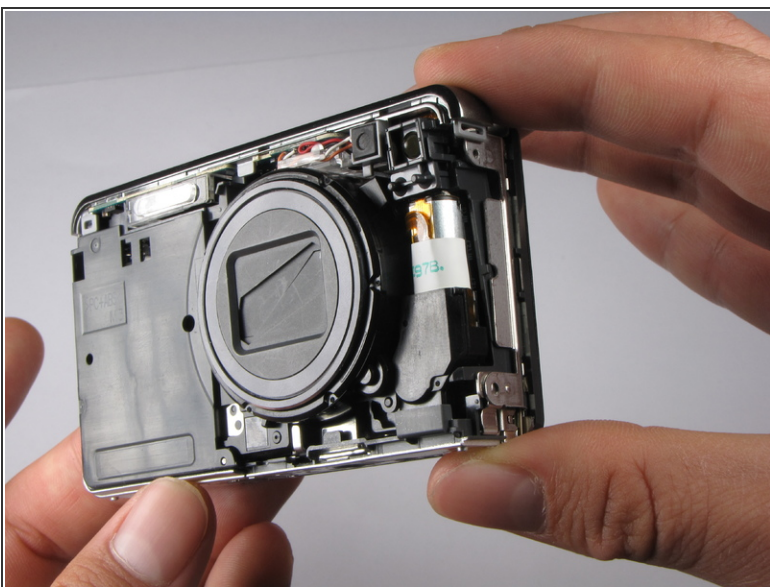



- This is what your camera should look like now that you have removed the casing from all sides.

Step 11 — LCD Assembly

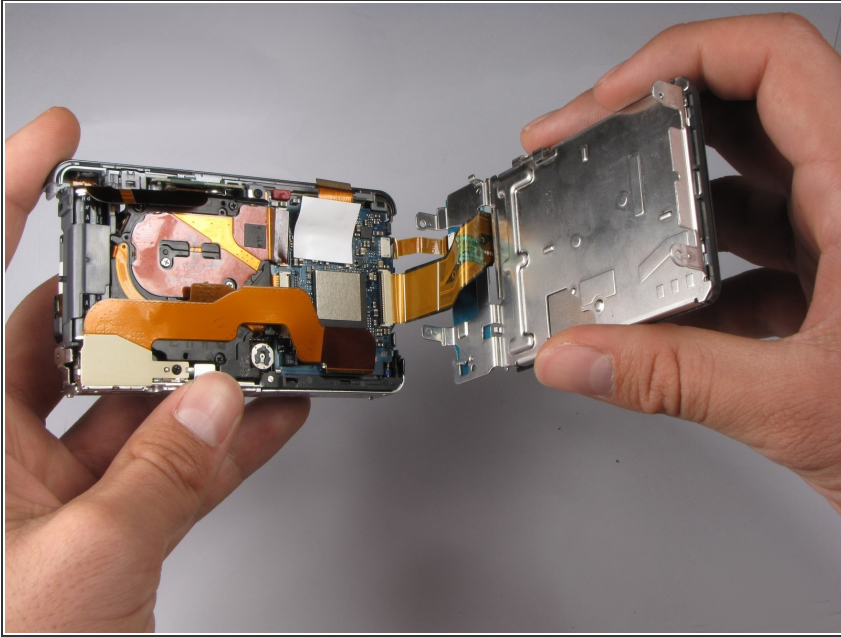

- Gently pull the LCD and its casing away from the motherboard as shown.
- ⓘ Be careful not to rip out any ribbon cables.



Step 12

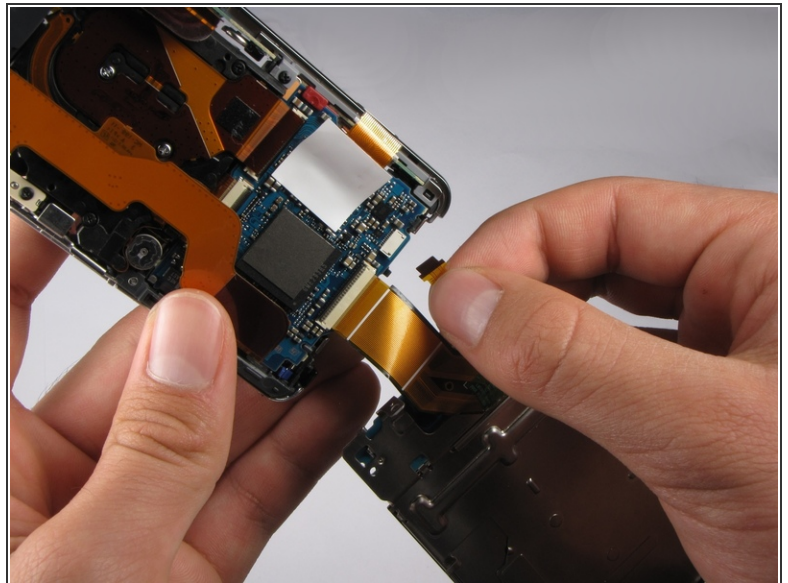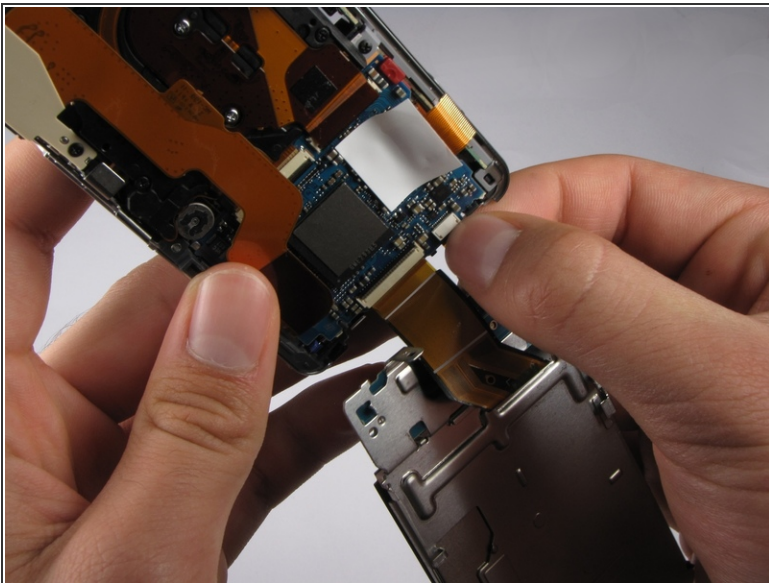

- Disconnect the small ribbon-wire by gently pulling on the small ribbon-wire where it connects with the motherboard.


⚠ Do *not* use excessive force to remove the wire because this may cause it to tear.

Step 13

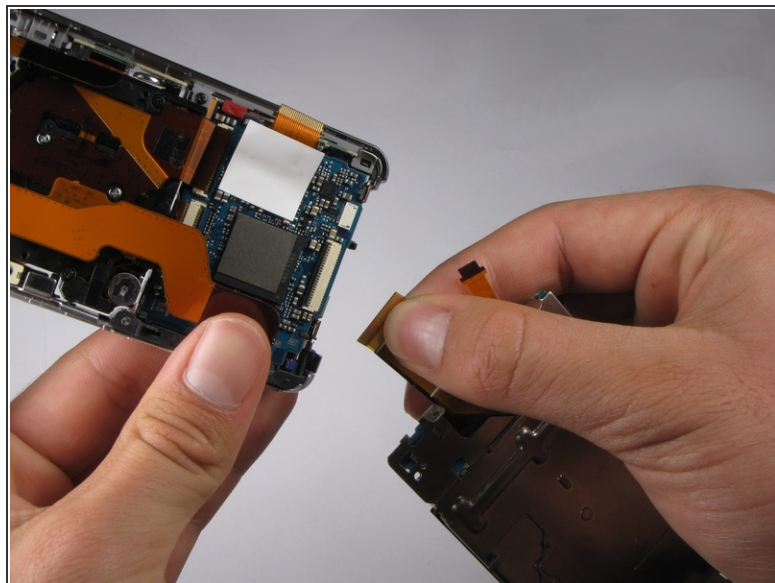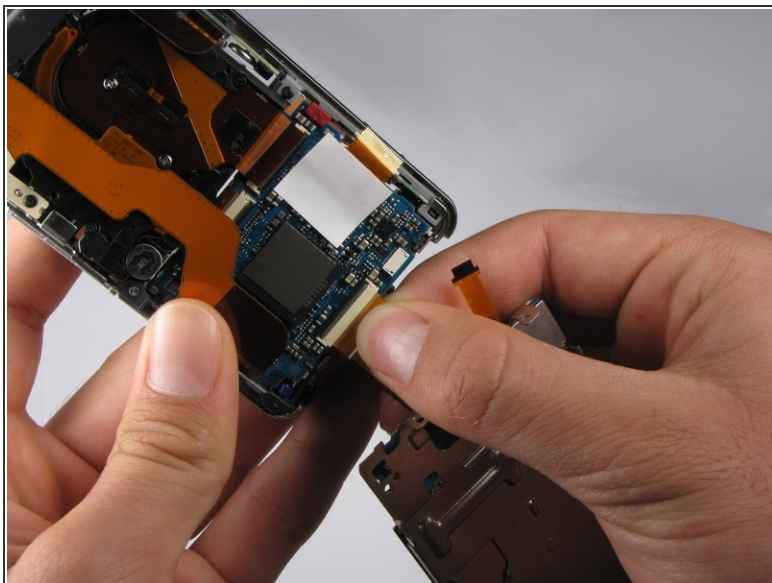


- Disconnect the large ribbon-wire by pulling on the large ribbon-wire where it connects to the motherboard.

Step 14

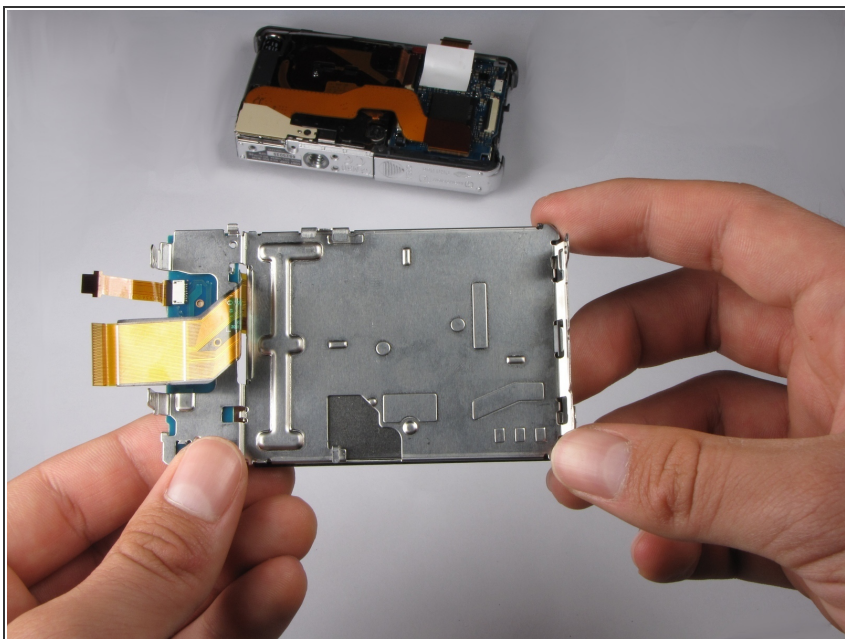


- Pull the LCD and its casing away from the rest of the camera.

Step 15 — Flash Bulb Assembly

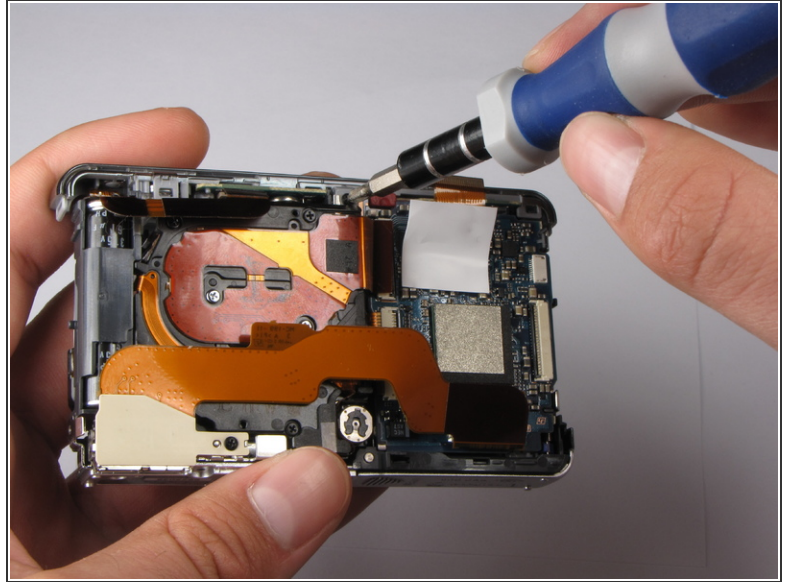


- Turn the camera so the back is facing you.
- Remove the 2.5mm Philips #0 screw at the top of the camera.

Step 16

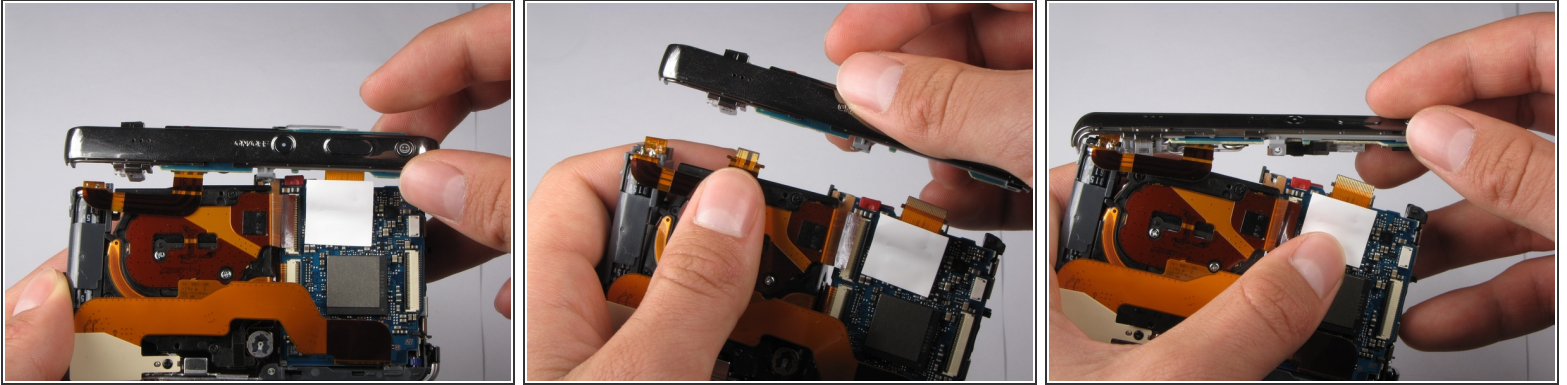



- Tilt top casing up and towards you.
- Carefully remove the right ribbon-wire from the top camera panel by pulling where the wire connects to the top.
- ⓘ Make sure to hold the camera with your thumb on the white square to ensure the ribbon-wire is not disconnected from the motherboard.
- Carefully remove the left ribbon-wire from the top camera panel by pulling where the wire connects to the top.

Step 17 — Flash Bulb

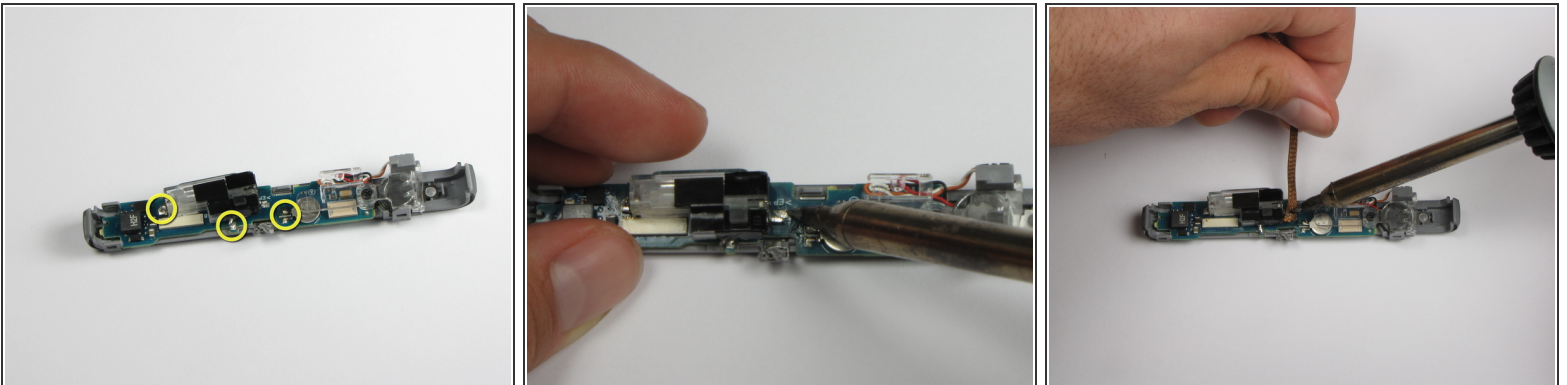

- Pull the top of the camera off and turn it so the bottom is facing you.
- Desolder the three connections from the bulb to the small circuit board.
- Remove the excess solder using your soldering iron and desoldering wick.

Step 18

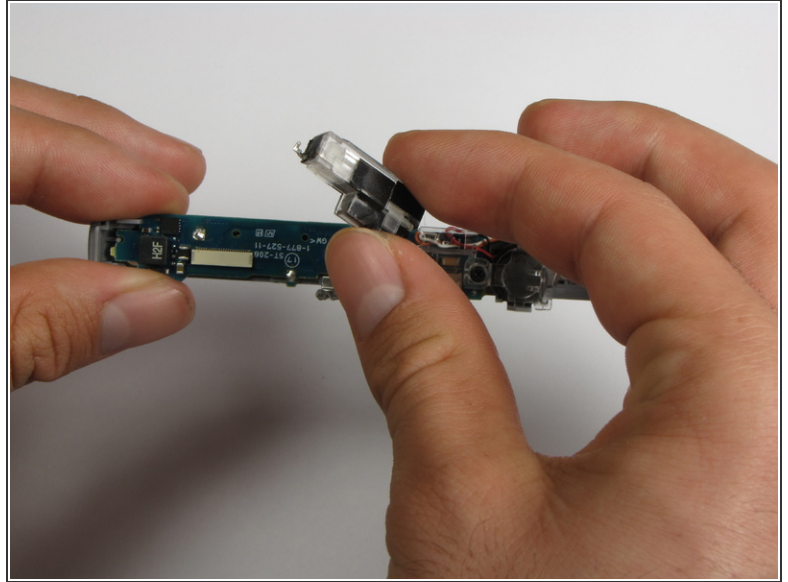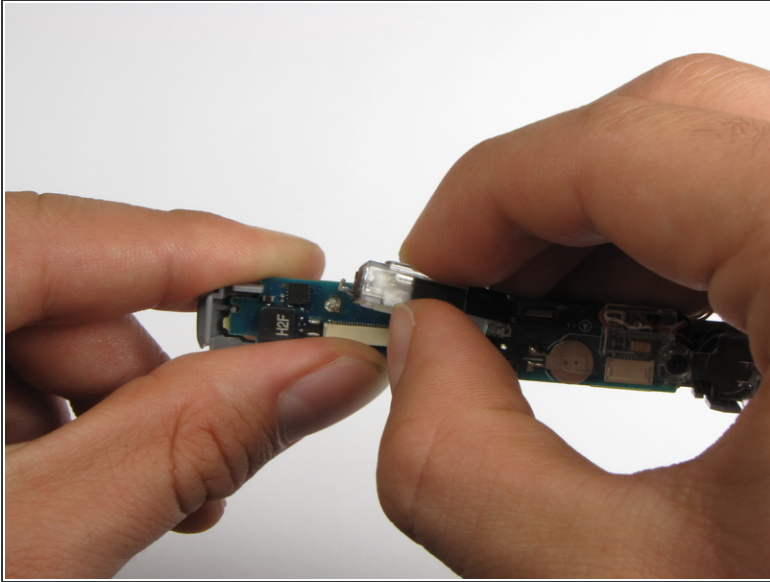

- Gently wiggle the flash bulb to remove it from the joints.
- ⓘ It may be necessary to use the soldering iron to heat up the joints as you pull it off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 06:23:55 PM.